


Pressure Drop vs. Flow Rate


Low Flow Rate

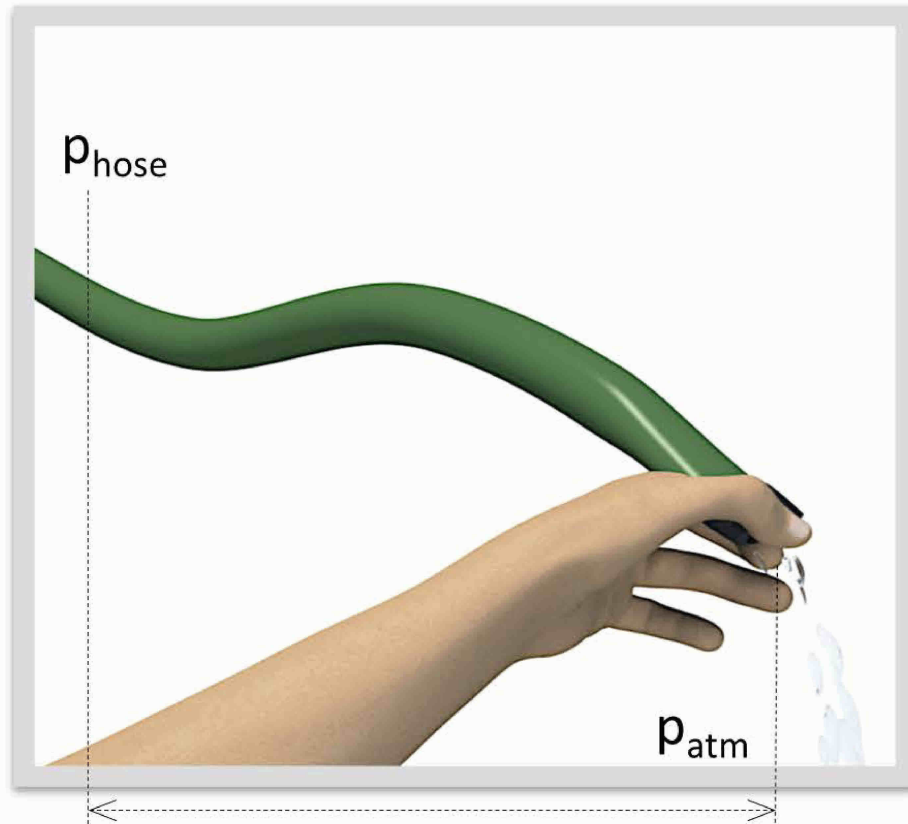

$$\Delta p = p_{\text{hose}} - p_{\text{atm}}$$

Large pressure drop

High Flow Rate

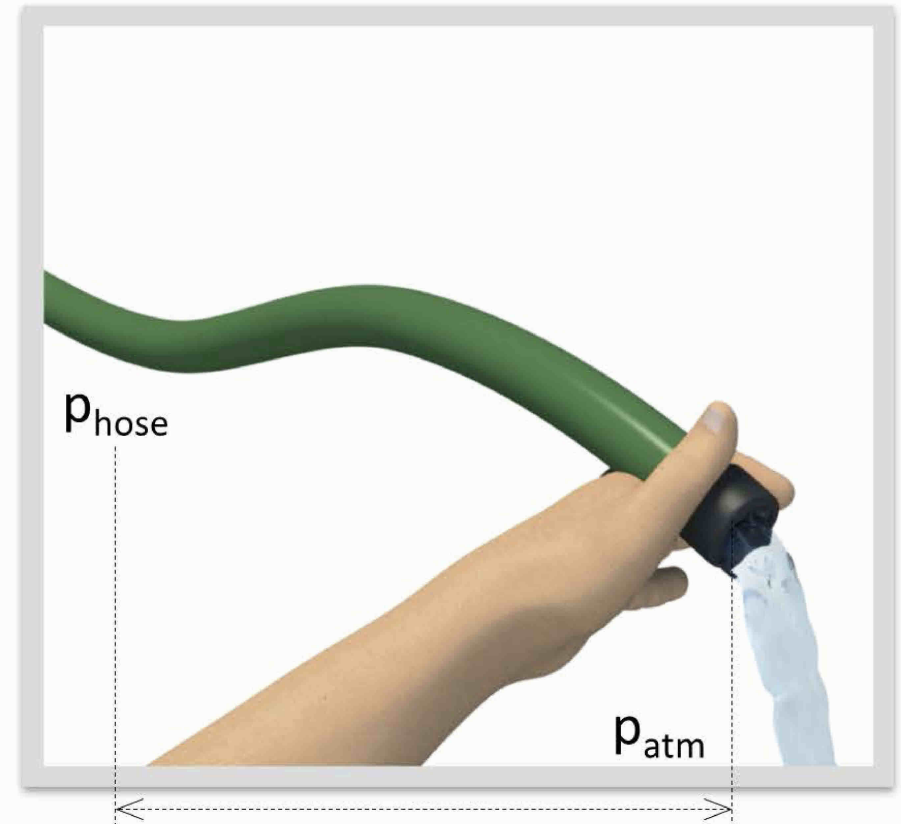

$$\Delta p = p_{\text{hose}} - p_{\text{atm}}$$

Small pressure drop